# Mega-Classic<sup>™</sup>



## Operator's Manual

Pure & Secure, LLC 4511 NW 42nd St Lincoln, NE 68524 Phone: 402-467-9300 • Fax: 402-467-9393 info@mypurewater.com www.MyPureWater.com

## Table of Contents

Important Safety Information
Introduction4
Record Important Information4
Included With Your Distiller4
Optional Accessories5
How Your Distiller Works
Preparing for Installation7
Installation8
Connecting the Incoming Water Line8
Connecting the Boiling Tank Drain Line & Overflow Line10
Connect the Distilled Water Line and Faucet11
Start-Up12
Start-Up
•
Sterilizing12
Sterilizing

- If you are not sure that your electrical outlet is properly grounded or that the circuit protection is correct, have it checked by a qualified electrician.
- Operate indoors only.
- The area **MUST** be well ventilated.
- **WARNING:** Disconnect the distiller from the power supply before assembling, adjusting or servicing the distiller.
- **NEVER** immerse the distiller in water or any other liquid.
- **NEVER** operate the distiller with a damaged cord or allow the cord to become exposed to hot surfaces.
- **DO NOT** use an extension cord or adapters.
- **DO NOT** let children play with the distiller.
- **DO NOT** touch the top of the distiller when it is operating because it becomes very hot.
- Exercise care when removing the boiling tank lid and never remove it when the distiller is operating.
- The installation and use of this product must comply with all applicable state and local laws and regulations.
- **IMPORTANT:** This distiller is designed to be used only with Pure Water accessories and replacement components.
- This distiller is equipped with fused pump circuitry. In the event of pump failure, check the pump fuse located on the panel under the switches. Replace only with a 1 amp Slo-Blo fuse. Never use any fuse larger than specified.
- **NEVER** have the unit in the Auto Drain mode if an auto drain connection is absent.
- The physiological effects of the operation of this distiller, beneficial or otherwise have not been investigated by U.L.
- Operating Pressure 30-100 PSI
- Mega-Classic produces 12 gallons per day (0.5 gallons per hour) under normal operating conditions

Congratulations on purchasing the finest home water distillation system on the market. With proper care and attention, the Mega-Classic will give you many years of top performance and high-quality drinking water. Please read this manual thoroughly before installing and operating your Mega-Classic.

#### **Record Important Information**

The model and serial number are found on the back panel. You should record the serial number below for future references.

Date of Purchase:

Model: Pure Water Mega-Classic

Serial Number:

Purchased from:

#### Included With Your Distiller


In addition to your Mega Classic distiller, your box will contain the following:








- Incoming Water Hook-up Kit. Includes: Saddle tapping valve 1/4"S x 1/4"T speedfit elbow 15 feet of 1/4" food-grade tubing
  - Drain Water Hook-up Kit. Includes: Hose clamp 1/2"T x 1/2"STEM speedfit elbow 12 feet of 1/2" flexible tubing 12 feet of 1/2" high-temperature tubing
- Distilled Water Hook-up Kit. Includes: Post filter
   3/8"T x 3/8"STEM speedfit elbow Filter bracket
   25 feet of 3/8" food-grade tubing
   6" faucet kit
   3/8"T x 1/4"F speedfit connector
- Owners Manual and Warranty Card
- Storage Tank Faucet
- Manual Drain Kit
- Power Cord







The following are optional accessories or maintenance items for the Mega-Classic. They may be purchased from your Dealer or Distributor, or directly from Pure Water.

- Mega-Classic Cart/Floor stand with castors for ease of use, cleaning and service. Also allows for proper positioning for draining the boiling and storage tanks. Stock #36996.
- Auxiliary hook-up kit for running distilled water to your refrigerator or icemaker. Stock #19009.
- Pressure tank hook-up kit to protect the pump when using with multiple dispensers. 19009B.
- Lumen<sup>™</sup> cleaner and descaler for cleaning the boiling tank. Stock #6603.
- Stainless steel polish. Stock #6606.
- Post-filter replacement cartridge. Stock #32513.
- Extended-reach faucet for your sink (an option from the standard 6" faucet). Stock #95304K.
- Use a Pre-Filter (Stock #19051) if you plan to draw water directly from the distilled water tank through the Distilled Water Drain.

#### How Your Distiller Works

The Mega-Classic is designed to produce approximately one gallon of highquality, pure distilled water every two hours, or up to twelve gallons in a 24-hour period.

The Mega-Classic is a fully automatic unit. The water level in the boiling tank and storage tank are controlled by individual floats and a set of microswitches.


The boiling tank operates on a modified batch approach. Feedwater is automatically added until a high level is reached and this triggers the heating element and fan to operate. This begins the distillation cycle.

As the unit distills, the water level in the boiling tank falls. When the water level gets close to the heating element, the low-level microswitch is triggered, causing feedwater to be added until the high level is reached. If, for some reason, no water enters the boiling tank when needed, the fan and heating element will remain off until the condition is corrected.

Once the storage tank is full of distilled water, the unit will automatically shut down and the contents of the boiling tank are drained by the automatic drain valve, thereby flushing out most of the contaminants from the boiling tank. If a drain is not available for automatic draining, the unit can be set to drain manually.

The Mega-Classic will begin distilling again once the water level in the storage tank drops to approximately 3/4 full. It continues to operate until the storage tank is full again.

The built-in demand pump allows distilled water to be delivered to a faucet, chilled/hot water dispenser, refrigerator, icemaker or other locations as desired.

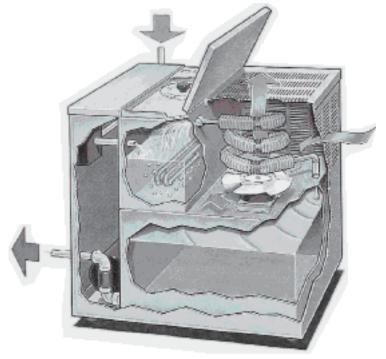

### Safety Feature

An overflow sensor is installed in the drip tray of your distiller in the unlikely event that a leak or an overflow situation occurs in your distiller. Your unit will automatically shut down when the switch senses a certain level of water in the drip tray.

#### **Special Feature**

An Hour Meter is installed on your Mega-Classic. This will allow you to track the operation and assist with scheduling maintenance.

#### **Preparing For Installation**

*Note:* The use of softened water is recommended to minimize scale build-up in the automatic drain valve. The Mega Classic is designed with an automatic draining feature. The boiling tank will drain when the storage tank is full, or if there is power loss. During installation you will install a manual valve in the drain line. This manual valve allows you to stop the water from draining if you do not have a drain available. If you have a drain you will leave the valve in the open position. If you do not have a drain then you would close this valve. If you close this valve it is highly recommended to drain the boiling tank water into a bucket at least once per month.

Other things to consider when installing your Mega-Classic:

- Select an area that will allow the distiller to remain level. Improper leveling could affect the production rate.
- The distiller must be located in close proximity to a water supply, floor or other drain and appropriate electrical supply source. The distiller should also be located in a well ventilated room.
- The Mega-Classic should be installed at least two feet above the floor. This is for several reasons:
  - 1. Easier position to observe and maintain.
  - 2. Better drainage from the boiling tank when it dumps the residue water.
- Electrical requirements: Isolated 115 VAC, 20 amp circuit (220 VAC, 10 amp). Check the electrical rating on the label on the rear of the distiller.
- When connecting the tubing into the quick-connect fittings, it is critical the tubing be inserted fully! The tubing should insert into the fitting 1/2" to 3/4". Failure to do so could cause water damage. We recommend that prior to inserting the tubing, you mark the tubing 1/2" from the end being inserted into the fitting, then pull back on the tubing to verify it is attached securely. This should ensure the tubing is properly and fully installed. Also, make sure the tubing is cut squarely and is free of rough edges.

#### Installation

Caution: The Mega-Classic is heavy. Please use caution during installation.

**Note:** The use of softened water is recommended to minimize scale build-up in the boiling tank.

*Caution: Never use the hot water line for your incoming water.* 

## CAUTION: The Mega Classic weighs approximately 75 lbs. Follow these instructions to prevent injury.

- 1. Open the carton from the bottom by cutting along the dotted line with a utility knife.
- 2. Carefully slide the carton up so the distiller is in the upright position when the carton is removed.
- 3. Remove and identify all parts kits as listed on page 4.

#### Connecting the Incoming Water Line

#### Notes and Cautions:

CAUTION: DO NOT use a hot water line for your supply line.


CAUTION: DO NOT turn the saddle tapping valve handle before or during installation. Be sure the piercing lance does not protrude beyond the rubber gasket. Failure to do this may result in damage to the piercing needle.

**Note:** The use of softened water for the raw water supply is recommended to minimize scale build-up in the boiling tank and automatic drain valve.

**Note:** The Mega-Classic comes standard with a saddle tapping valve. In some areas a saddle tapping valve may not be permitted. In such instances, contact your authorized Pure Water Distributor for other water line connection options.

#### To hook-up the Incoming Water Line:

- Locate the parts kit bag identified "Raw Water Hook-Up Kit".
- 2. Turn the household water supply OFF.
- 3a. For installation on *copper pipes*:
  - Assemble the saddle tapping valve on the cold water pipe so the outlet is in a convenient direction. See figure 1.
  - Tighten the screws evenly. The brackets should be parallel. Tighten firmly, but do not overtighten.

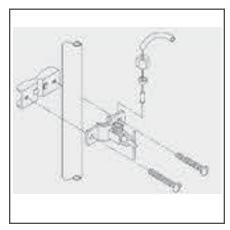

c. Connect the 1/4" plastic tubing to the saddle tapping valve.

- d. Coil a minimum of 8 feet of tubing behind the distiller to allow it to be moved away from the wall for cleaning or service.
- e. Cut the required length of tubing to run from the saddle tapping valve to the distiller.
- f. Install the speedfit elbow onto the fitting marked "Raw Water In". Pull to test.
- g. Connect the other end of the 1/4" plastic tubing to the elbow. Pull to test.
- h. Turn the saddle tapping valve handle clockwise until you feel it is firmly seated.
  Note: You have now pierced the water supply line and the valve is closed.
- i. Turn the handle counterclockwise to open the valve. Turn on the household water supply and check the connections for leaks. Tighten where required.
- 3b. For installation on brass, steel, or PVC pipes:

**Note:** Make sure the water supply is turned off and drain the line. Make sure your are using the COLD water line.

- a. Drill a 3/16" hole in the pipe. Use a hand drill to avoid shock hazard.
- b. Turn the saddle tapping valve handle to expose the lance beyond the rubber gasket no more than 3/16".
- c. Assemble and place the body of the valve over the hole so the lance fits into the hole. Make sure the outlet is in a convenient direction. See figure 1.
- d. Tighten the screws evenly. The brackets should be parallel. Tighten firmly, but do not overtighten.
- e. Turn the saddle tapping valve handle clockwise to close the valve.
- f. Connect the 1/4" plastic tubing to the saddle tapping valve.
- g. Coil a minimum of 8 feet of tubing behind the distiller to allow it to be moved away from the wall for cleaning or service.
- h. Cut the required length of tubing to run from the saddle tapping valve to the distiller.
- i Install the speedfit elbow onto the fitting marked "Raw Water In". Pull to test.
- j. Connect the other end of the 1/4" plastic tubing to the elbow. Pull to test.
- k. Turn the handle counterclockwise to open the valve. Turn on the household water supply and check the connections for leaks. Tighten where required.


Caution: Never use the hot water line for your incoming water.

#### Connecting the Boiling Tank Drain Line & Overflow Drain Line

#### Notes and Cautions:

**CAUTION:** The boiling tank drain line delivers water in excess of 160° F to drain when actuated. Caution should be used when running this line to ensure safe placement of the tubing. The end of the tube should be secured to prevent movement during the draining cycle. If young children might be around the system, it is desirable to run the drain line through a large diameter piece of CPVC tubing which serves as a shield/insulator.

**Note:** Do not connect the drain line directly to a waste water drain, sewer or trap. Always allow an air gap between the drain line and the waste water to conform with local codes, and to prevent the possibility of waste water being forced back into the distiller. See figure 2.

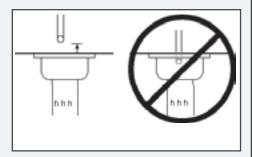

Note: If you are draining into plastic pipe,


*it must be rated CPVC at a minimum to handle the temperatures of boiling water. PVC is unacceptable.* 

**Note:** This unit, under normal operating settings, should be self draining. It is recommended that the distiller be installed with a proper drain. The location of the boiling tank drain outlet on the rear of the machine **MUST** be higher than the household drain. We recommend that you install your distiller on the custom designed stand available through Pure Water (part #36996). Failure to install the distiller properly could result in the unit draining hot water onto the floor. If your installation plans do not call for installing with a drain, you can manually close the drain by using the Manual Drain Kit. Pure Water cannot be responsible for any damage resulting from improper installation.

#### To hook-up the Boiling Tank Drain Water Line & Overflow Drain Line:

- 1. Locate the parts kit bag identified "Drain Water Line Hookup Kit".
- Insert one end of the manual drain valve into the 1/2" x 1/2" speedfit elbow. Press in firmly. Pull to test.
- 3. Insert the elbow into the red fitting on the back of the Mega-Classic marked "Boiling Tank Drain". Press in firmly. Pull to test.
- 4. Insert the high-temperature tubing into the manual drain valve. Pull to test.
- 5. Slide the 5/8" hose clamp onto the end of the clear, flexible 3/8" tubing. Install the tubing onto the elbow marked " Overflow Drain" on the lower rear of the unit. Tighten the hose clamp securely with a screwdriver.
- 6. Run the overflow drain line to the same location as the boiling tank drain line. Secure together if desired.
- 7. To hook up unit as manual drain operation, See Manual Drain Kit.

Caution: Always allow an air gap between the drain line and the waste water drain.

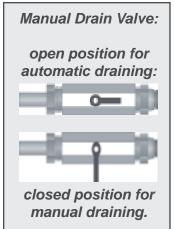

#### Connecting the Distilled Water Line and Faucet

#### Notes and Cautions:

**Note:** Always use food-grade tubing (as included with the kit) for plumbing distilled water. **NEVER** use copper, as it can leech into the distilled water.

#### To hook-up the Distilled Water Line:

- 1. Locate the parts kit bag identified "Distilled Water Line Kit".
- 2. Insert the elbow into the blue fitting on the back of the unit marked "Distilled Water Out". Press in firmly. Pull to test.

Note: If you purchased a pressure tank for your Mega Classic, please take note of installation instructions included with our Pressure Tank Kit now. If no pressure tank will be used, please proceed.

#### To hook-up the Faucet:

- 1. Locate the faucet included in the Distilled Water Line Hook-Up Kit.
- Wrap the stem of the faucet with Teflon Tape and install the faucet at the desired point of dispensing as shown in figure 3. *Note:* The channel washer and stem nut should be tightened fully and be flush to the bottom of the sink top to hold the faucet in place.
- 3. Install the 3/8" speedfit connector onto the bottom of the threaded stem of the faucet.
- 4. Determine the correct length of 3/8" tubing needed to connect the outlet of the Distiller to the faucet. Cut and route the tubing to desired locations. We recommend that you secure the 3/8" waterline to the floor joists or other structure of the house to prevent the tubing from moving during water dispensing.

Note: Leave enough extra tubing to install the filter and to move the unit for cleaning.

 Insert one end of the routed 3/8" tubing into the speedfit connector on the bottom of the faucet and the other end into the elbow labeled "Distilled Water Out" on the back of the distiller. Press in firmly. Pull to test.

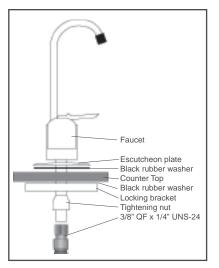


Figure 3

Caution: Never use copper tubing to run your distilled water line. It can leech into the distilled water.

#### Notes and Cautions:

**CAUTION:** Do not, under any circumstances, cut or remove the round grounding prong from the electrical plug.

**Note:** Open the boiling tank lid and remove the wire tie restraining the float. This is used to prevent damage during shipment.

**Note:** This system must be fully grounded at all times. The electrical receptacle you use must be a fully grounded, single phase, AC 115-120 volt, 20 amp minimum circuit. If a two-pronged wall receptacle is encountered, it is the personal responsibility and obligation of the customer to contact a qualified electrician and have it replaced with a properly grounded three-pronged wall receptacle or have a ground-ing adaptor properly grounded. If an extension cord must be used, it should be a 3-wire, 20-amp minimum cord.

#### First-Time Start-Up, Rinsing, Sterilizing, and Filter Installation

Tools/Items Needed:

Caution: Do not install carbon filter until solution is completely drained. 5 gallons of Distilled water at room temperature Liquid chlorine bleach Phillips screwdriver Utility knife Adjustable wrench

We recommend that you sterilize your Mega Classic before putting it into use in order to eliminate any microorganisms that may have collected in the storage tank.

#### To sterilize the waterlines from the distiller to your faucet and/or icemaker

#### (steps 1-12):

- 1. Lift the access panel from the top of the unit. See figure 4.
- 2. Remove the top right vented panel by removing the three screws with a phillips screwdriver. See figure 4.
- 3. Remove the storage tank lid and set aside.
- 4. Pour in 2 1/2 gallons of Distilled water from the 5 gallon bottle into the storage tank.
- 5. Add 1 teaspoon of liquid bleach to the storage tank and mix well.

Caution: Do not add more than 1 teaspoon of liquid bleach into the storage tank.



Figure 4

Usage of safety glasses and rubber gloves is strongly recommended.

- 6. Replace storage tank lid and vented cover.
- Plug power cord into the machine and plug the distiller into the power supply.
- 8. Turn the main power switch ON.
- 9. Open the faucet for 15 to 20 seconds ensuring there is a steady stream of water, then close the faucet.

#### Caution: Do not consume this solution.

10. Check water line for leaks. Tighten where required.

#### Caution: If a leak is present, the pump may start automatically.

- 11. Allow the solution to remain in the system for 10-15 minutes.
- 12. Open the faucet and pump the remaining water from the storage tank. When the pump shuts off, press the "PUMP OVERRIDE" switch until no water is present. See figure 4a. Close the faucet.

#### To sterilize your distiller storage tank (steps 13-15):

- 13. Turn the function switch to DISTILL and the fan switch to STERILIZE. The fan will shut off. See figure 4a.
- 14. Allow to steam sterilize for 45 minutes to 1 hour.

#### *Caution: For proper sterilization, unit must run for at least 45 minutes, but longer than 1 hour may harm the distiller.*

- 15. Switch the main power to OFF. Unplug the distiller from the power supply.
- 16. Remove the top, right vented panel and the storage tank lid.
- 17. Pour the remaining 2 1/2 gallons of distilled water into the storage tank.
- 18. Replace the storage tank lid and vented panel.
- 19. Install the carbon filter.
  - a. At a location close to the Mega-Classic, install the post filter bracket using the tape installed on the bracket, or use a nail or a screw to affix to a wall.
  - b. Place the post filter into the bracket and ensure it is secure.
  - c. From the existing, distilled water line, cut the desired length of tubing to run from the back of the machine to the filter. Insert the tubing from the back of the machine to the inlet on the post filter. Insert the tubing from the faucet to the outlet of the post filter. Press in firmly. Pull to test.
- 20. Plug the unit into the power source and turn the main power switch ON.
- 21. Open faucet and pump out water from the storage tank until the pump shuts off. **DO NOT CONSUME THIS SOLUTION.**



Figure 4a

- 22. Turn the fan switch to DISTILL. See figure 4a.
- 23. Allow distiller to operate and fill up the storage tank. Distiller will shut off automatically. This will take approximately 24 hours.
- 24. Open the faucet and allow to run for 3 to 4 minutes to flush out the system. DO NOT CONSUME. Close the faucet. The pump should shut off and the machine will start-up.

**NOTE:** If pump does not shut off, you may have a leak in your water line.

25. You now have approximately 5 gallons of water in the storage tank for consumption.

#### Maintenance and Cleaning

If operated in the recommended automatic drain mode, the Pure Water Mega-Classic is designed for low maintenance performance. The Mega-Classic has a built-in drain valve that flushes the contaminants and residue out of the boiling tank after each full tank of distilled water is produced. This minimizes the build-up of scale in the boiling tank.

#### **Overall Maintenance Requirements**

The following guide should be used for the maintenance of your distiller. The timing will vary according to your local water conditions. It is your responsibility to maintain your equipment. Without proper maintenance, your distiller may not produce optimum results. The following times may be far too long for your particular area, so keep track of the average time and adjust the schedule below:

**Every month\* :** Clean the boiling tank (see below).

\* More frequent if water is hard

Every 3 months: a) Change the post filter (see page 16).
 b) Clean the exterior. Use Stainless Steel Polish & Cleaner (stock #6606). It is available from your Dealer or Distributor or from Pure Water.
 Every 6 months: a) Sterilize (see page 12).

#### Cleaning the Boiling Tank

#### **Notes and Cautions:**

*Caution:* Under no circumstances should the cleaning solution be heated and run through a distillation cycle.

**Note:** If operating in the manual drain mode, you will need to drain the boiling tank once per week.

*Note:* Failure to clean the interior can result in:

- a) Scale build-up causing premature heating element or drain valve failure.
- b) Reduced purity of the distilled water due to the possibilities of splash over of contaminants from the boiling tank.

#### To clean the boiling tank:

- 1. Open the auxiliary faucet at the sink and remove enough water to restart the unit. This will be evident because the fan will turn on.
- 2. Open the top cover and move the function switch to "Clean". The fan will stop.
- 3. Carefully feel the boiling tank lid and check the temperature. If it is hot, wait at least 30 minutes for the unit to cool.
- 4. After the unit is cool, remove the boiling tank lid.
- 5. Add Lumen<sup>™</sup> by following the directions on the package.
- 6. Add additional water using a jar or pitcher until the water level inside the boiling tank is above the scale line. *Caution: Do not overfill.*
- 7. Let the solution stand overnight.
- 8. After the scale has softened, turn the main power switch OFF. This will allow the boiling tank to drain. Once the boiling tank has drained, turn the main power switch ON and allow the boiling tank to refill. Turn the power OFF again, repeat this step several times to flush the boiling tank of cleaning solution and scale.

**Note:** If using the Manual Drain Kit, ensure that the manual drain valve is in the "open" position.

9. Return the function switch to "Distill". The unit is now ready for normal operation.

*Note:* If cleaning the unit without the automatic drain connections, ensure that you have a 3-gallon container or other method of catching the drain water.

#### Changing the Post Filter

- Turn the main power switch to "Off" and open the auxiliary faucet at the sink to bleed the line of pressure. Close the faucet.
- 2. Have a bucket available to catch any excess water in the line. Remove the post filter by releasing the fittings on each end. Use care when removing the filter because you will need to reuse the fittings.



Figure 5

Push in on the grey ring in the fitting, while pulling the tube out with the other hand.

- 3. Remove the fittings from each end of the post filter (see figure 5). Wrap the threads of each fitting with new Teflon tape, and install in the new filter cartridge. Tighten securely.
- 4. Connect the inlet side of the filter to the waterline.
- 5. Using a bucket, hold the filter outlet over the bucket. Turn the main power switch to "On" and allow water to flush the carbon fines out of the new filter. If the storage tank is low, depress the pump switch to "Override" to flush the filter. Continue until the water coming out of the filter is clear.
- 6. Once flushed, turn the main power switch to "Off".
- 7. Reconnect the outlet side of the filter to the waterline and turn the main power switch to "On".


#### Assembly of the Optional Cart/Floor Stand

This cart is a custom fabricated accessory designed especially for the Mega-Classic. It allows for the distiller to be positioned correctly for ease of operation, draining and main-tenance. It also allows for the use of a manual drain valve or faucet on your distilled water storage tank.

To assemble the Floor Stand/Cart:

- 1. Connect pieces (D) with pieces (A), and (C) with the bolts (B) provided. Piece (A) should be positioned on top as shown in the drawing.
- 2. Insert the Castor Inserts (F) into the legs of Piece (D).
- 3. Insert the Castors (E) into the legs. Make sure that the Castor Inserts and Castors are inserted completely into the legs.
- 4. Place the distiller on top of the cart, ensuring that the legs on one side of the Mega-Classic are inserted into the Leg Catchers.

<u>ITEM</u>	DESCRIPTION	<u>QTY</u> .
А	Side Brace with Leg Catcher	2
В	Bolt, 1/4-20 x 2" Hex Head	8
С	Side Brace	2
D	End Frame, Welded	2
Е	2" Castors	4
F	Plastic Inserts for Castors	4

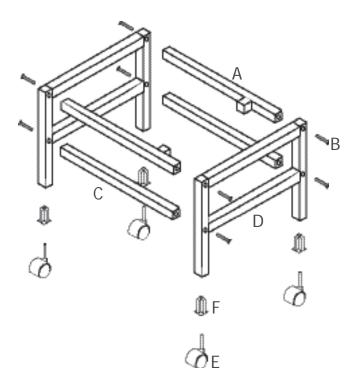

#### The machine will not operate at all.

*Note:* The water level in the storage tank must be below 3/4 full before the distiller can be restarted.

- Make sure the power cord is plugged into the wall outlet and the outlet is working properly.
- Make sure the main power switch is ON. If it is, the switch may be defective and needs to be replaced. Check with a volt/ohm meter.
- Make sure the function switch is in the "Distill" position. If it is, the switch may be defective and needs to be replaced. Check with a volt/ohm meter.
- Make sure the incoming water supply is turned on and is flowing into the boiling tank.
- Check for excessive water in the drip tray. Drain if necessary.

## 2

#### The boiling tank will not fill with water automatically.

**Note:** Make sure the saddle tapping valve or utility hook-up valve is turned ON to supply the feed water.

• If the float ball inside the boiling tank is resting against the support arm and is fully depressing the low-level microswitch, you probably need to replace the microswitch. Check with a volt/ohm meter.

If the microswitch checks out ok, and the heating element and fan come on, then you need to replace the heating element relay. Another indication of a bad heating element relay is the reset will pop.

• If the solenoid is making a buzzing noise, your feed water supply line may be clogged or you may have a defective solenoid valve. Check it with a volt/ohm meter.

## 3

#### The fan will not operate or is making excessive noise.

- If the fan is mounted properly on the storage tank, the fan blade is not loose around the motor shaft and and the blade spins freely when turned by hand without hitting anything, then you may have a defective fan motor. Check with a volt/ ohm meter.
- If the fan switch is in the "On" position, you may have a defective switch. Check with a volt/ohm meter.
- If the function switch is in the "Distill" position and the heating element is not operating either, you may have a defective function switch. Check with a volt/ohm meter.

The distiller fills to normal operating level, but the heating element will not heat or bring water to a boil.

- If the reset is not popped or the fan is running and the boiling tank is full of water, you may have a defective heating element. Replace heating element.
- If water continues to fill the boiling tank after draining the tank, and the fan isn't operating, then you may have a defective high-level boiling tank microswitch. Check with a volt/ohm meter.
- If the function switch is in the "Distill" position, the fan is not operating, you may have a defective function switch. Check with a volt/ohm meter.

#### The boiling tank overflows with water.

**Note:** If your machine is new, make sure you have removed the wire tie used to restrain the float during transit.

• If the float actuating arm is depressing the high-level microswitches (the bottom ones) and the float rod is moving freely and floats accordingly with the water level, you may have a defective microswitch. Check with a volt/ohm meter.

If the microswitches check out ok, and the heating element and fan come on, then you need to replace the heating element relay. Check with a volt/ohm meter.

- If the microswitches and heating element relay check out ok, then you may have a defective solenoid. Turn the main power switch to "Off". If water continues to flow into the boiling tank, then you need to replace the solenoid.
- If the float is not moving freely, you may need to install a new bushing and o-ring float repair kit.
- If the float ball is full of water, replace the float ball.

## 6

#### Machine does not shut off when storage tank is full.

- If the storage tank high-level microswitch is fully depressed, then you may have a defective microswitch. Depress both the boiling tank and storage tank high-level microswitches. If the unit does not shut down, remove one wire from the boiling tank microswitch. If the unit shuts down, replace the boiling tank microswitch. If the machine does shut down, leave the wire off and remove one wire from the storage tank high-level microswitch. If the unit shuts down, replace the storage tank high-level microswitch. If the unit shuts down, replace the storage tank high-level microswitch. If the unit shuts down, replace the storage tank high-level microswitch.
- If the unit does not shut down when removing the wires from testing the boiling tank and storage tank microswitch wires, then you need to replace the main control relay.


The boiling tank automatic drain valve does not open or shut.


- If water continues to drain during operation of the distiller, you may have a defective drain valve. Heavy scale may be preventing the drain valve from closing completely. Clean the boiling tank or replace the drain valve.
- If there is no water coming from the drain valve or it is draining slowly, you may have scale build-up in the drain valve or a defective drain valve. Clean or replace the drain valve.

The demand pump does not work properly or not at all.

Note: The storage tank must be at least 1/4 full for the pump to operate.

- If the unit is plugged in and the main power switch is "On", you may have a blown fuse, defective pump switch, defective pressure switch or defective pump. Check with a volt/ohm meter.
- If pump cycles on and off, but no water is delivered or it will not shut off after you close the faucet or cycles on and off when not in use, you may have leaks in your water line, a defective pressure switch, or defective pump.
- If pump does not deliver water to the faucet at a steady pressure, you may have a defective pump.

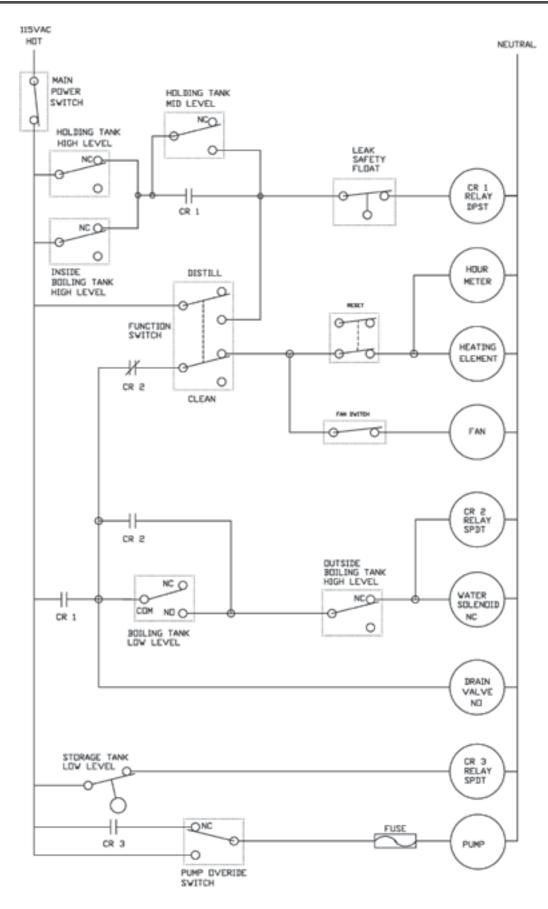

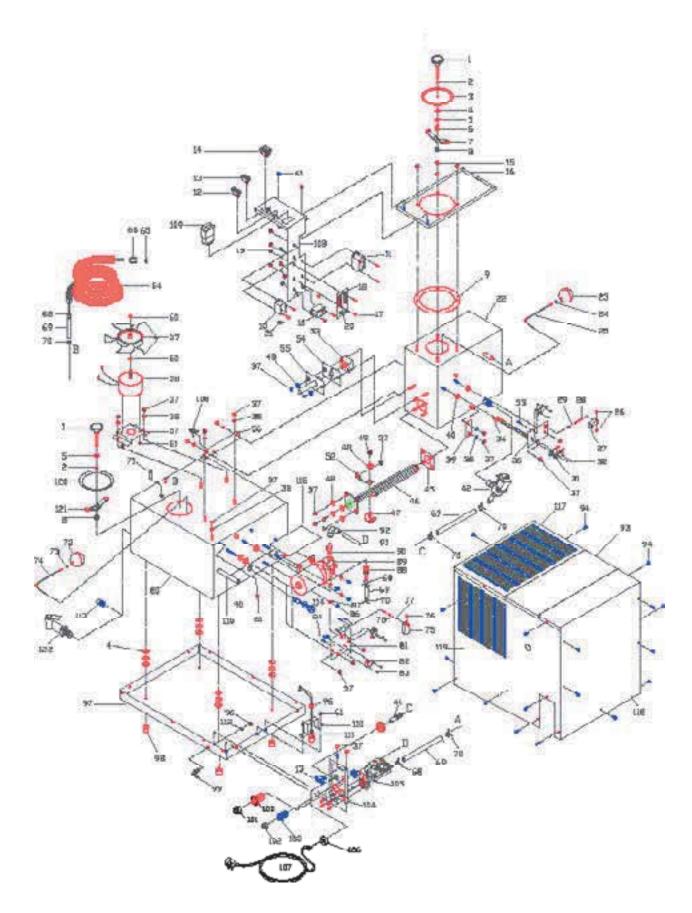

#### Parts Listing

Key # 120V P/N 240V P/N Description

#### Key # 120V P/N 240V P/N Description

1 8009	8009	.Lid knob w/stud
2 6022	6022	. Lid o-ring
3 519		
4 6049		
		.Flat washer, 1/4'
6 9085		
7 4000	4000	.Lid crossbar w/nut
		Locknut, 1/4-20
* 409	409	Lid Assembly (#1-#8)
9 6010	6010	.Boiling tank gasket
10 7206	7206V	.Relay, heating element
		.Relay, storage tank
		.Momentary water switch (2 each)
		.ON/OFF switch (2 each)
14 7221	7220	Eurotion switch
		.Cap Nut, 1/4-20
		.Tray, boiling tank, studded
		.Screw, 8-32 x 1/2"
18 7215		
19 9043	9043	.Hex Nut, 8-32
20 7217	1 72171	.amp slo-blo fuse
		Boiling tank, studded
23 9519		
24 9018		
25 514		
26 9024		
27 9098	9098	.Actuating arm
28 9080	9080	.Float bushing
29 6021		
30* 659	659	.Float Kit (#23-#29)
31 7201	7201	.Microswitch
32 9041		
		.Screw, 4-40 x 5/8"
		.Screw, 4-40 x 1-1/8"
		.Microswitch Kit (#31-#33)
		.Boiling tank switch plate
37 9045		
		.Lock washer, 1/4"
39 32006	32006	.Boiling tank mounting bracket
40 8070		
41 9633	9633	Adaptor, STEM to BARB
42 7257	7257V	Automatic drain valve, NC
43 7230	7230	.Cable holder, w/latch
44 9046	9046	.Star washer, #10
		.Heating element gasket
		.Heating element
47400A-02		
47400A=02	400A-02 .	Let weeker 4/4"
		.Flat washer, 1/4"
49 9061		
		.Heating Element Kit (#45-#49)
		.U-Clamp Kit (#47-#49)
52 508	508	.Heat tab
53 7069	7069	.Reset
54 510		.Reset retainer board
		.Plate, reset retainer, studded
		.Boiling tank mounting angle
		.Fan motor mounting bracket
58 32504		
59 7010		
60 9092	9092	.Push nut
61 9003	9003	Lock nut, 8-32
		.Fan & Motor Kit (#58-#61)
63* 639	639	.Fan Blade Kit (#59-#60)
		.Condensing coil
		.Compression ring, 3/8"

66 9510	9510	.Compression nut, 3/8"
		.Condensing Coil Kit (#64-#66)
		.Hose clamp, 19/32"
69 9541	9541	.Silicone tubing
		.Hose clamp, 5/8"
71 8014		
72 9519		
73 9018		
74 525		
		. Storage tank actuating arm
76 9024		
77 9080		
78 6021		
79* 655	655	.Float Kit (#72-#79)
80 36519	36519	. Storage tank, studded
81 32022	32022	.Switch mounting plate
82 7209		
83 9041		
		.Screw, 4-40 x 5/8"
		.Microswitch Kit (#82-#84)
86 9070	9070	LOCK NUT, 10-24
		.Flat washer, #10
		.Nylon hose BARB elbow
89 32505		
90 9606		
91 9577	9577	.3/8" tubing
92 9615	9615	.Speedfit union elbow, 3/8"
		.Cladding access door
94 9029	9029	.Sheet metal screw
96 9048	9048	Nut hex 1/8"
07 32037\N/_02	32037\\\_02	2 Stainless steel tray, studded
37 32037 4-02		
0.9 9011		
98 8011	8011	Appliance feet
99 95504	8011 95504	.Appliance feet .Nylon elbow
99 95504 100 9611	8011 95504 9611	. Appliance feet . Nylon elbow . Bulkhead union, 1/2"
99 95504 100 9611 101 9617	8011 95504 9611 9617	Appliance feet Nylon elbow Bulkhead union, 1/2" Red collet cover, 1/2"
99 95504 100 9611 101 9617 102 9618	8011 95504 9611 9617 9618	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8"
99 95504 100 9611 101 9617 102 9618 103 9612	95504 9611 9617 9618 9612	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8"
9995504 1009611 1019617 1029618 1039612 10436036	9011 95504 9611 9617 9618 9612 36036	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS
9995504 1009611 1019617 1029618 1039612 10436036 1057219A		. Appliance feet .Nylon elbow .Bulkhead union, 1/2" .Red collet cover, 1/2" .Blue collet cover, 3/8" .Bulkhead union, 3/8" .Pan, connection, SS .Solenoid
9995504 1009611 1019617 1029618 1039612 10436036 1057219A		. Appliance feet .Nylon elbow .Bulkhead union, 1/2" .Red collet cover, 1/2" .Blue collet cover, 3/8" .Bulkhead union, 3/8" .Pan, connection, SS .Solenoid
9995504 1009611 1019617 1029618 1039612 10436036 1057219A 1067275	8011 95504 9611 9617 9618 9612 36036 7219AV 7275	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector
9995504        1009611        1019617        1029618        1039612        10436036        1057219A        1067275        1077276	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord
9995504 1009611 1019617 1029618 1039612 10436036 1057219A 1067275 1077276 10832035A	8011 95504 9611 9617 9618 9612 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical
9995504 1009611 1019617 1029618 1039612 10436036 1057219A 1067275 1077276 10832035A 109.219-0227	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 7276 32035A 219-0227.	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter
9995504        1009611        1019617        1029618        1039612        10436036        1057219A        1067275        1077276        10832035A        109.219-0227        11032029	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 7276 32035A 219-0227 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 7276 32035A 32029 	Appliance feet Nylon elbow Bulkhead union, 1/2" Red collet cover, 1/2" Blue collet cover, 3/8" Bulkhead union, 3/8" Pan, connection, SS Solenoid IEC Female connector IEC Power cord Plate, switch, electrical Hour meter Bracket, safety float Switch, level, safety
9995504        1009611        1019617        1029618        1039612        10436036        1057219A        1067275        1077276        10832035A        109.219-0227        11032029        111213-0037        1129627A	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 7276 32035A 32029 	Appliance feet Nylon elbow Bulkhead union, 1/2" Red collet cover, 1/2" Blue collet cover, 3/8" Bulkhead union, 3/8" Pan, connection, SS Solenoid IEC Female connector IEC Power cord Plate, switch, electrical Hour meter Bracket, safety float Switch, level, safety O-ring, 3/8"ID x 9/19"ID
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 32029 213-0037 9627A 9624	Appliance feet Nylon elbow Bulkhead union, 1/2" Red collet cover, 1/2" Blue collet cover, 3/8" Bulkhead union, 3/8" Pan, connection, SS Solenoid IEC Female connector IEC Power cord Plate, switch, electrical Hour meter Bracket, safety float Switch, level, safety O-ring, 3/8"ID x 9/19"ID Plug, 3/8"-16, NPT, nylon
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 7276 32035A 32029 	Appliance feet Nylon elbow Bulkhead union, 1/2" Red collet cover, 1/2" Blue collet cover, 3/8" Bulkhead union, 3/8" Pan, connection, SS Solenoid IEC Female connector IEC Power cord Plate, switch, electrical Hour meter Bracket, safety float Switch, level, safety O-ring, 3/8"ID x 9/19"ID Plug, 3/8"-16, NPT, nylon Float, level control
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 32035A . 219-0227 32029 . 213-0037 9627A 9624 9624 110-9057 32039	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9624 110-9057 32039 6070	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9624 110-9057 32039 6070 36034	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9627A 9627A 9624 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, right side panel
99	8011 95504 9611 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9627A 9627A 9624 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9627A 9627A 9627A 9627A 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, wrap around
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9627A 9627A 9624 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, wrap around . Lid, storage tank
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 32029 32029 32037 9627A 9627A 9627A 9627A 9627A 9627A 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, wrap around . Lid, storage tank . Lid Crossbar, w/nut, storage tank
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 213-0037 9627A 9627A 9627A 9624 32039 32039 36034 36031 36032 	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, wrap around . Lid, storage tank . Lid Crossbar, w/nut, storage tank . Faucet, Black, lock open
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 9627A 9627A 9627A 9627A 9627A 9627A 9631 36031 36032 548 402C-01 95315 410	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, right side panel . Cladding, wrap around . Lid, storage tank . Lid Crossbar, w/nut, storage tank . Faucet, Black, lock open . Storage Tank Lid Assembly
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 32029 9627A 9627A 9627A 9624 32039 36031 36031 36032 548 402C-01 95315 410 32050	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, right side panel . Cladding, wrap around . Lid, storage tank . Lid Crossbar, w/nut, storage tank . Faucet, Black, lock open . Storage Tank Lid Assembly . Boiling tank side insulation
99	8011 95504 9617 9617 9618 9612 36036 7219AV 7275 7276 32035A 219-0227 32029 32029 9627A 9627A 9624 10-9057 32039 36034 36031 36032 548 402C-01 95315 410 32050	. Appliance feet . Nylon elbow . Bulkhead union, 1/2" . Red collet cover, 1/2" . Blue collet cover, 3/8" . Bulkhead union, 3/8" . Pan, connection, SS . Solenoid . IEC Female connector . IEC Power cord . Plate, switch, electrical . Hour meter . Bracket, safety float . Switch, level, safety . O-ring, 3/8"ID x 9/19"ID . Plug, 3/8"-16, NPT, nylon . Float, level control . Pump cover bracket . Grommet protector strip . Top Cladding w/slots . Cladding, right side panel . Cladding, wrap around . Lid, storage tank . Lid Crossbar, w/nut, storage tank . Faucet, Black, lock open . Storage Tank Lid Assembly

\* parts kit \*\* not shown on exploded view

Form #6325, © 2017, Pure & Secure, LLC Rev. 11/17